


# PROGRAMMATION EOLIS SENSOR RTS



## Installation

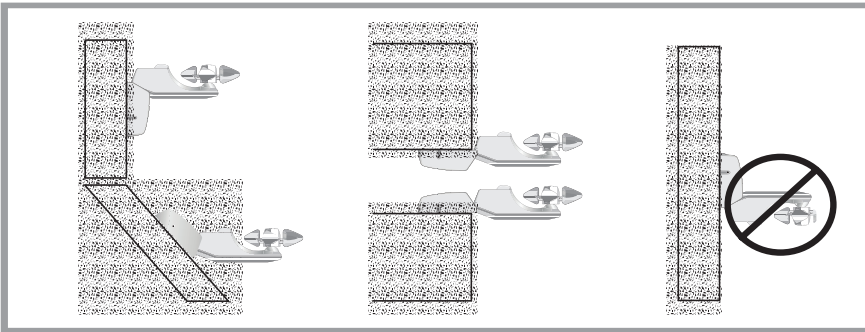


## Abrir programación

Appuyez sur le bouton derrière



## Fermer programmation Eolis Sensor RTS

Appuyez sur le bouton Eolis Sensor RTS

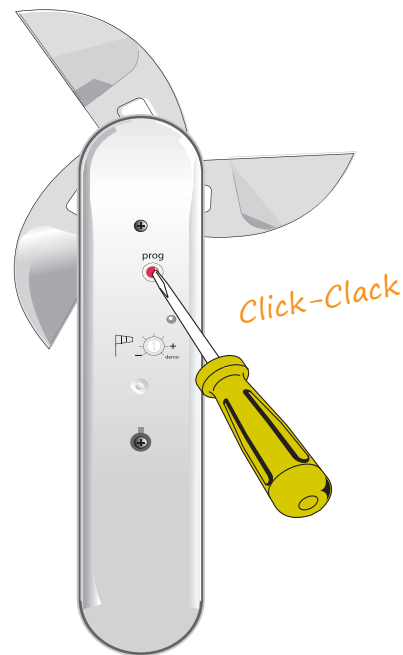

## Reglage Eolis Sensor RTS

